

## How to download video using an i.Link/FireWire/IEEE 1394 connection

An i.Link cable is the quickest and easiest way to download your video to your computer.


### To transfer your video

1. Connect your digital video camera to your computer using an i.Link cable. For more information, read [How to connect your camera to your computer](#).







2. Turn your camera on, and set it to playback mode. When prompted, click **Capture Video using Windows Movie Maker**. Then click **OK**.

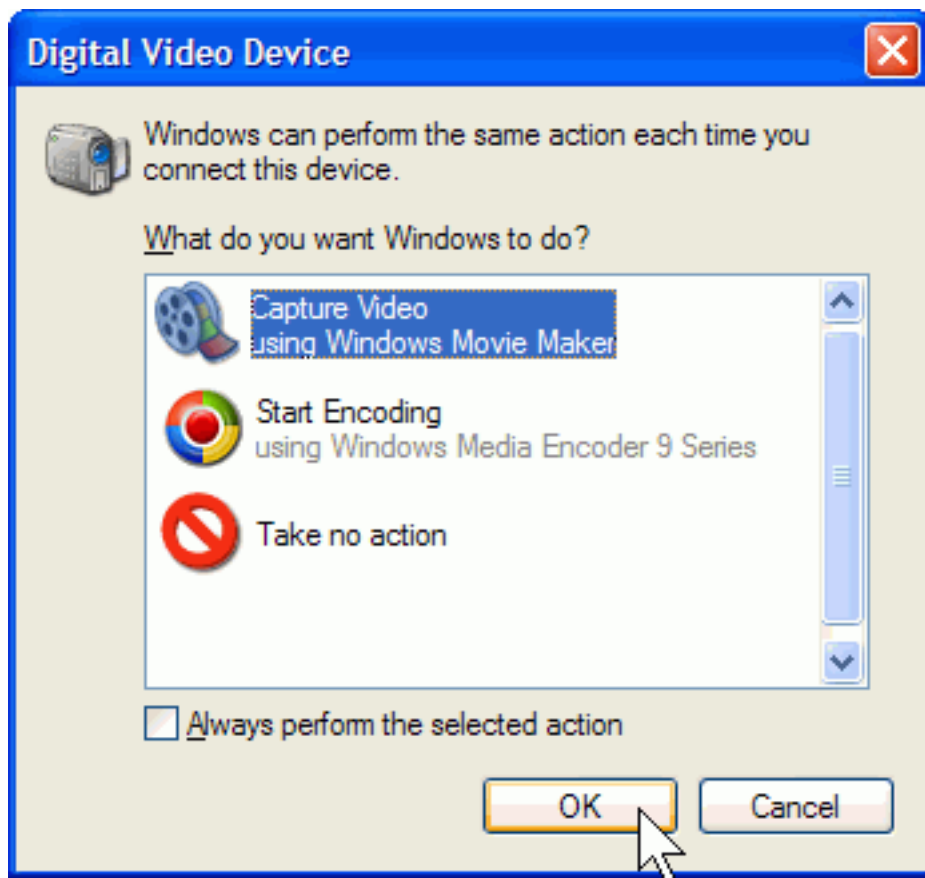


3. Microsoft Windows Movie Maker starts the Video Capture Wizard. On the **Capture Video File** page, type a name for your video. Then click **Next**.

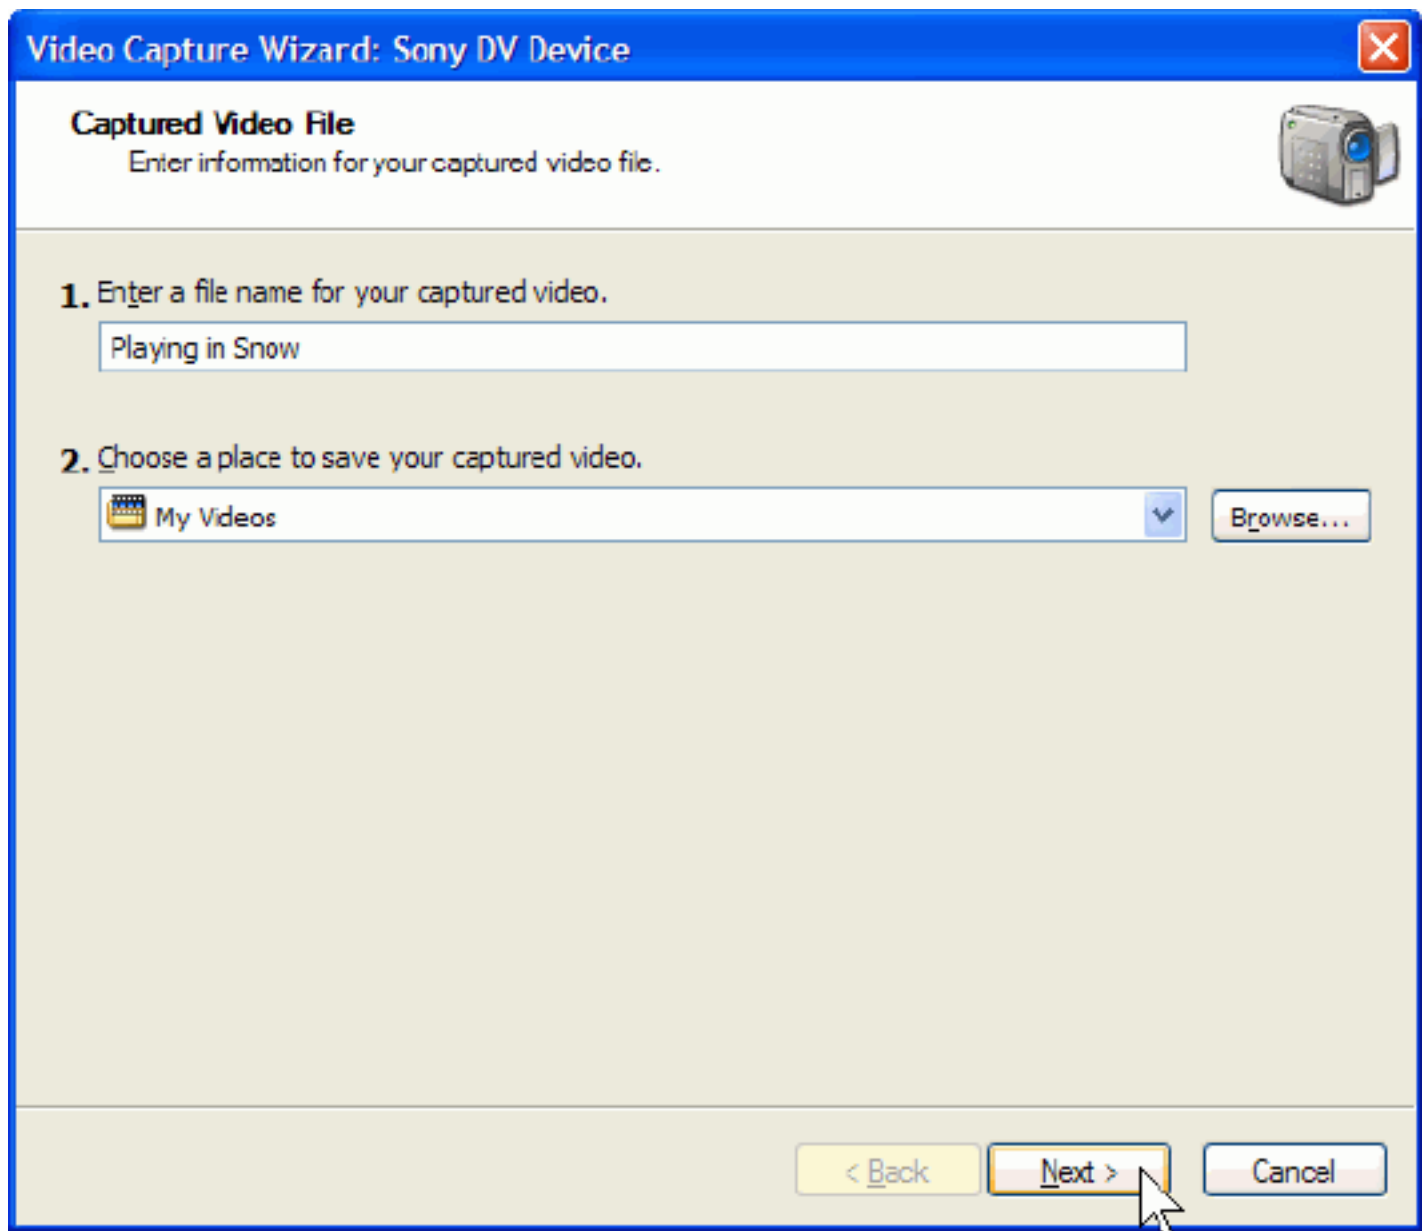


4. On the **Video Setting** page, accept the default settings by clicking **Next**.

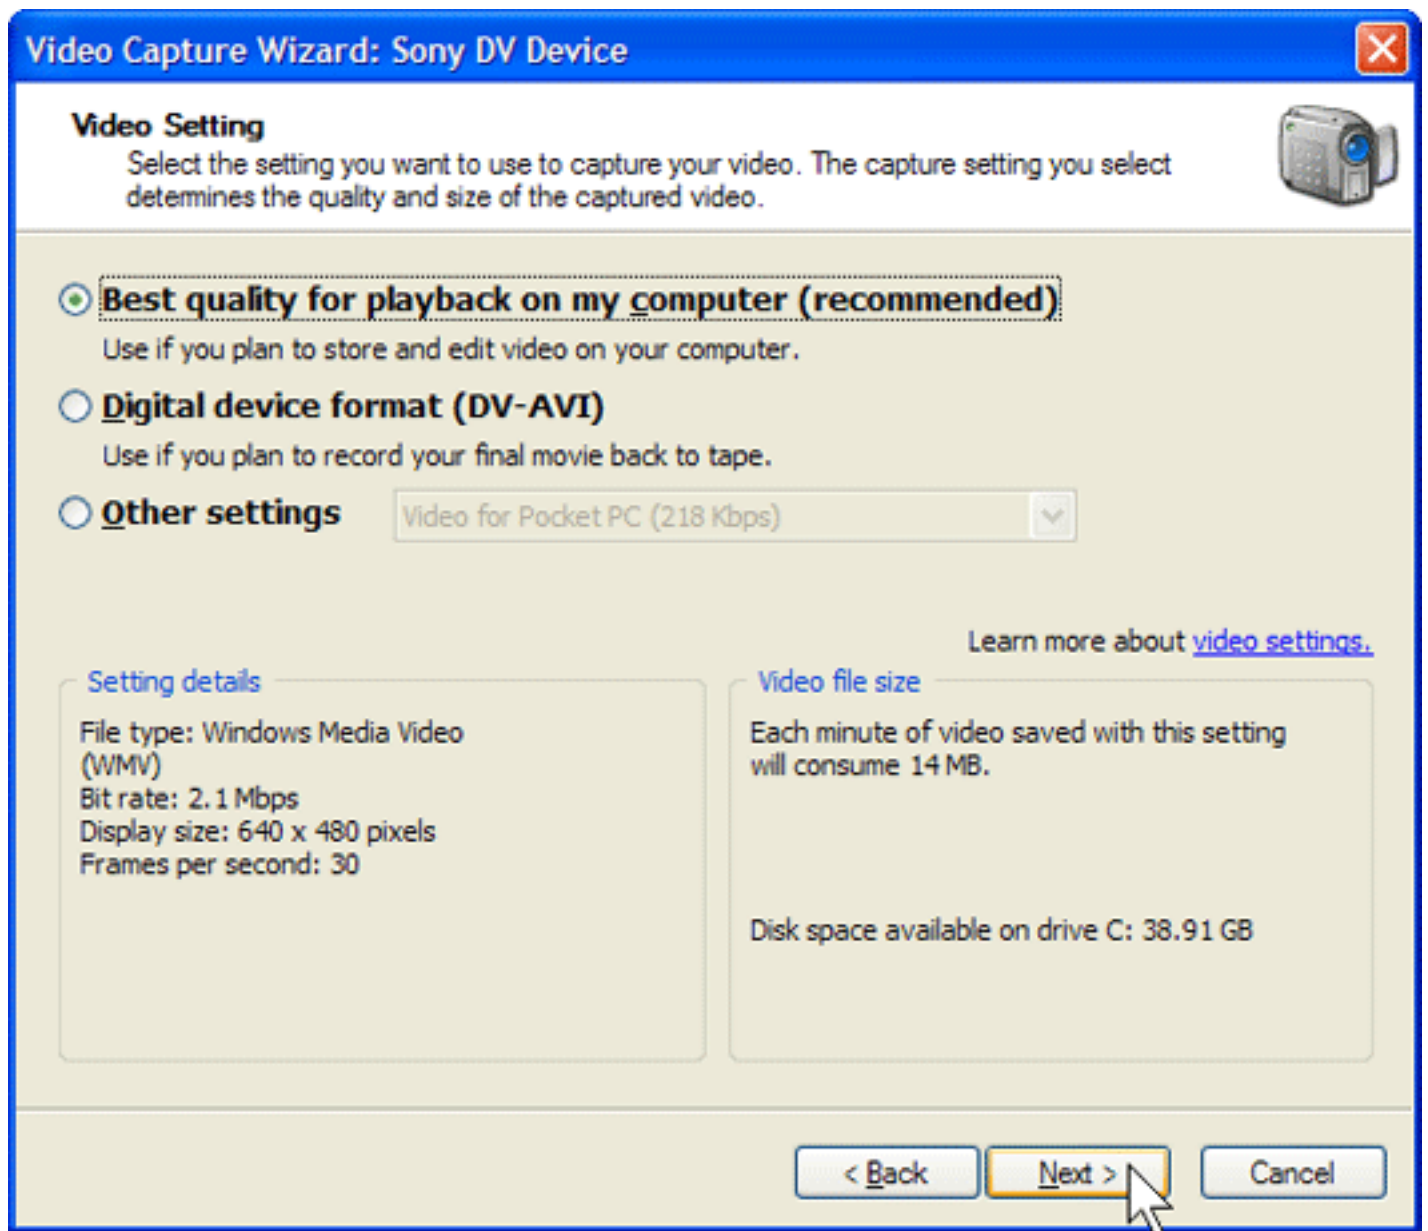

5. On the **Capture Method** page, click **Next**. It's easiest to capture the entire tape at once; if sections remain that you don't need, you can delete them later.

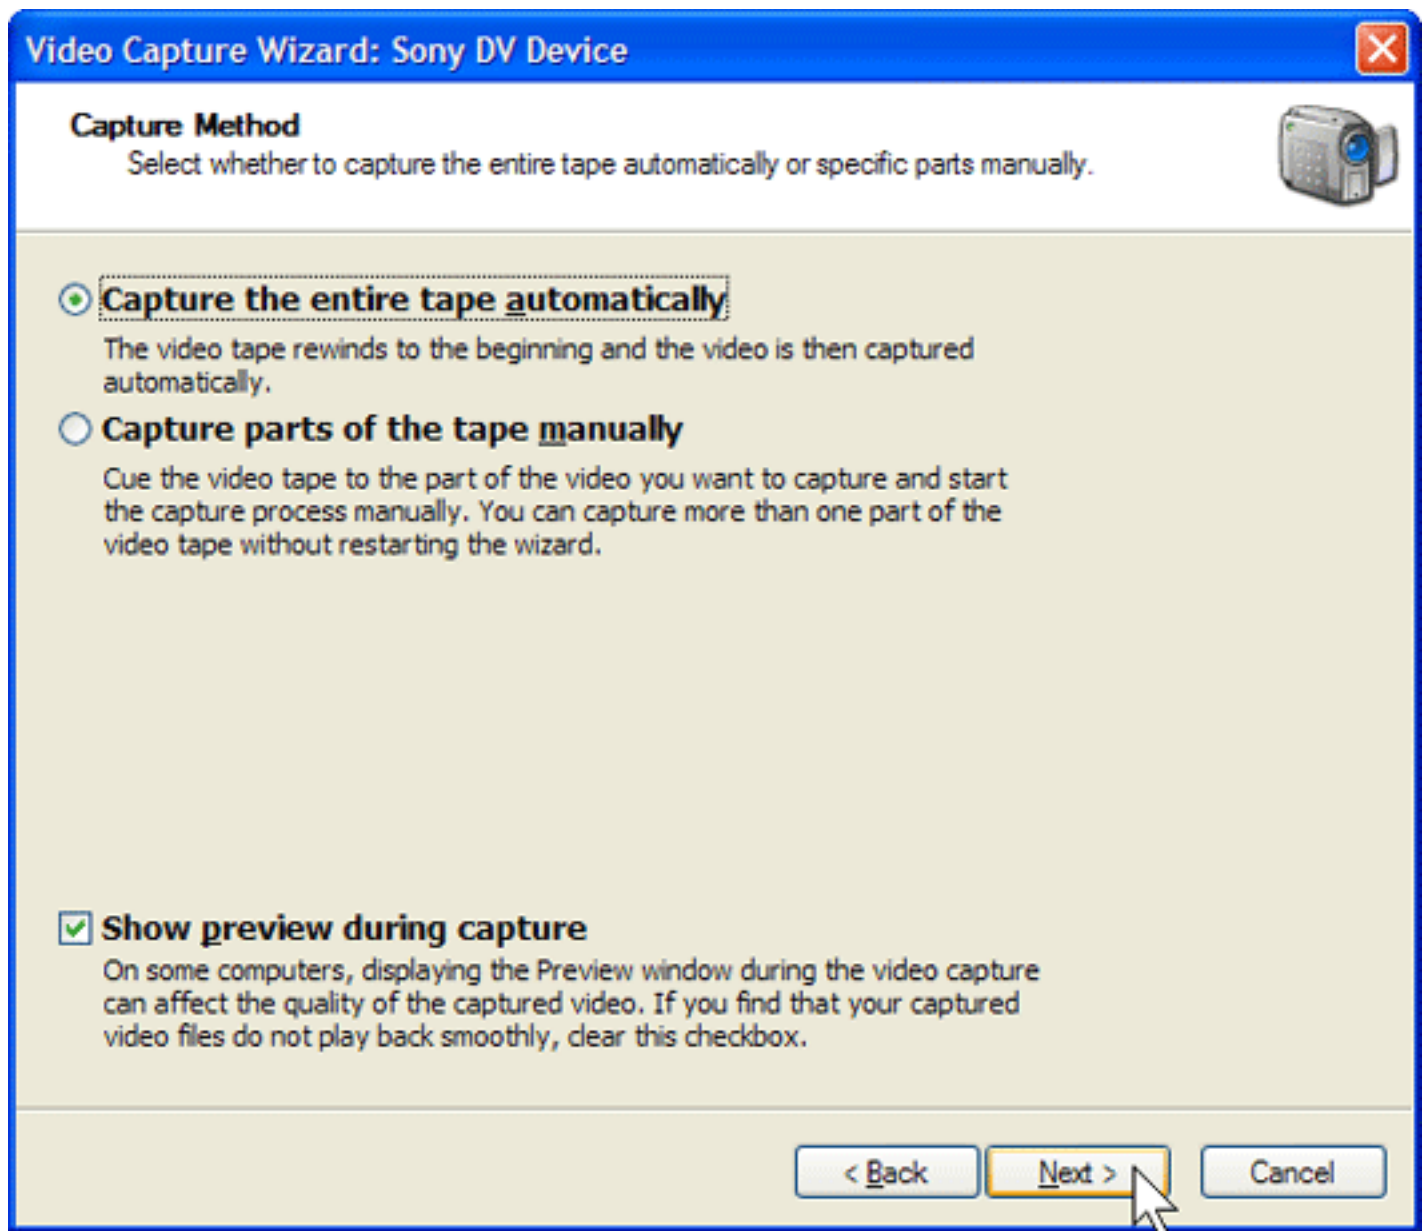

6. The Video Capture Wizard rewinds your tape and then begins capturing it. While the tape is being captured, you'll see it playing in the Preview window and you'll be able to hear the audio through your speakers. After the tape is captured (this usually takes about an hour), the wizard will stop automatically. It always scans the entire tape, even if you have just recorded a few minutes of video. If you reach the end of your recording before it reaches the end of your tape, click the **Stop Capture** button, and then click **Yes**.

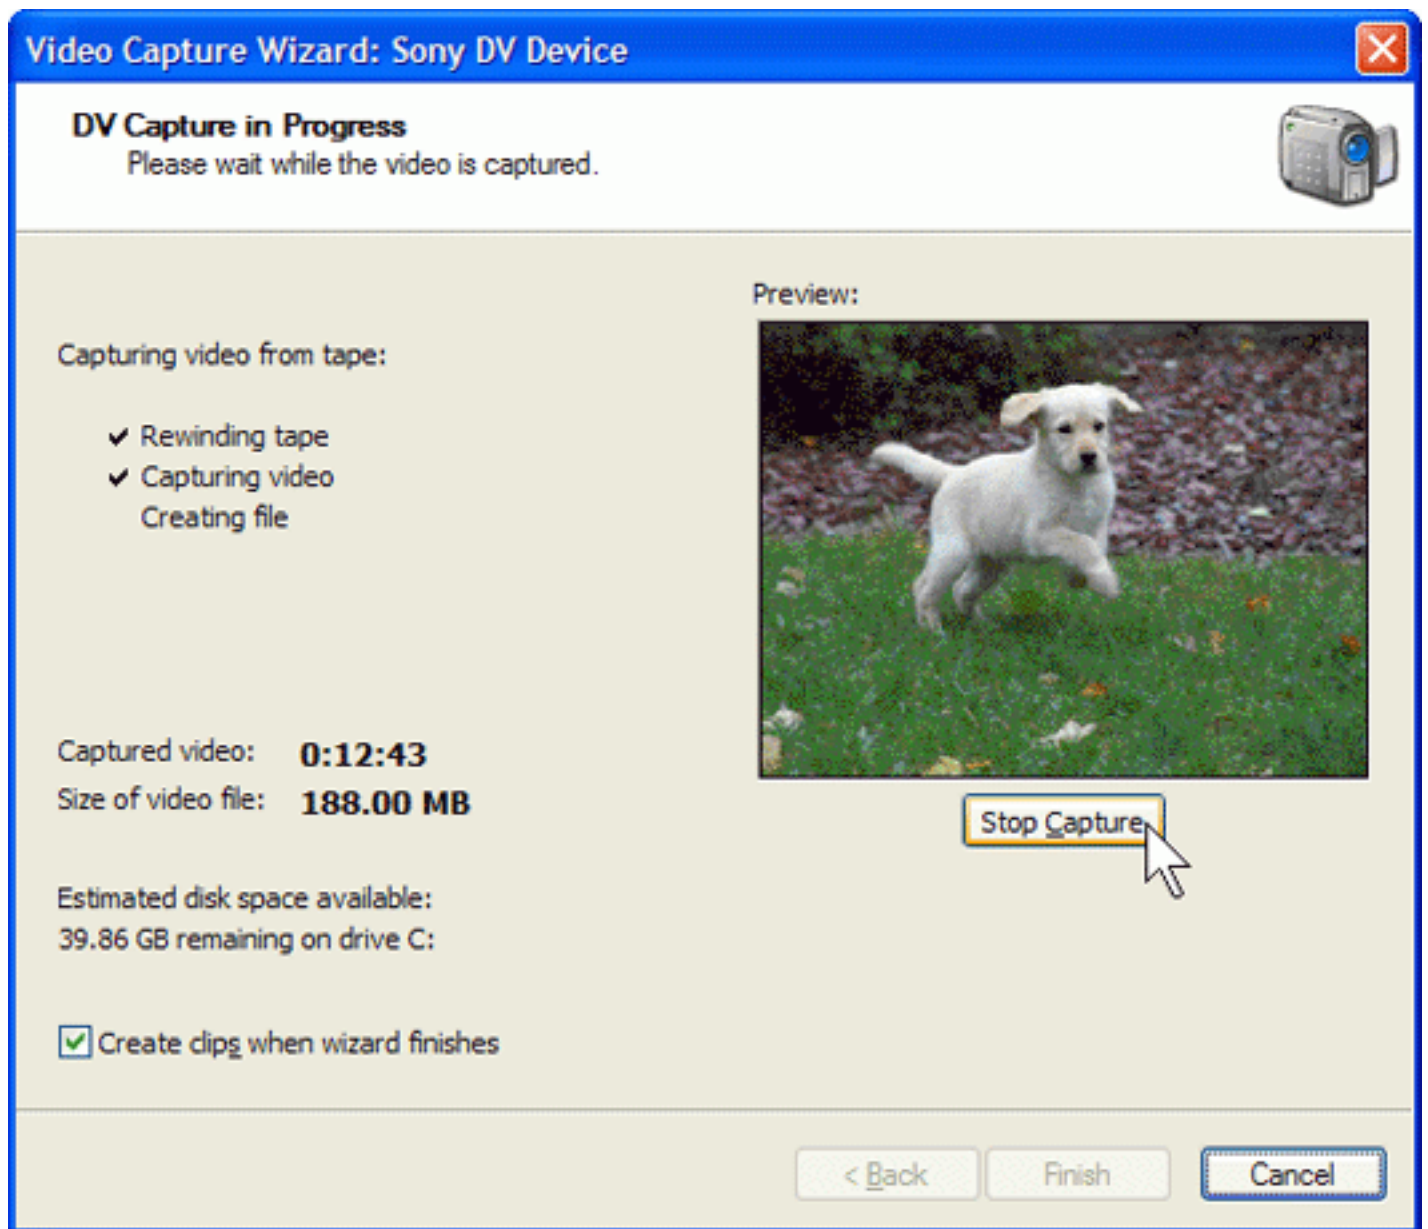

Movie Maker automatically breaks your movie into clips and adds the clips to a video collection with the name you provided. Now you're ready to [edit your movie](#).